

A high-speed photograph of water splashing into a clear glass. The water is captured in mid-air, creating a dynamic and refreshing scene. The background is a soft, light blue, and the overall tone is clean and hygienic.

watersafe[®]

LEAD TEST

FOR DRINKING WATER

**ULTRA
SENSITIVE
RAPID TEST**

LEAD

**RESULTS IN
MINUTES 8**

Instructions For Use

REF WS-207P

ABOUT THIS PRODUCT

The Watersafe® Lead Test can detect dissolved lead below the EPA Action Level of 15 parts per billion (ppb).



Kit Components

- Pipette
- Test Strip
- Test Vial
- Desiccant (to be discarded)

Read all instructions before use

Precautions and Warnings

- Do not open foil pouch prior to use.
- Do not reuse any components of the test kit.

Storage


- Store at room temperature (10-30°C/50-86°F)
- Do not use after expiration date on packaging

Sample Type

- Drinking water




INSTRUCTIONS FOR USE

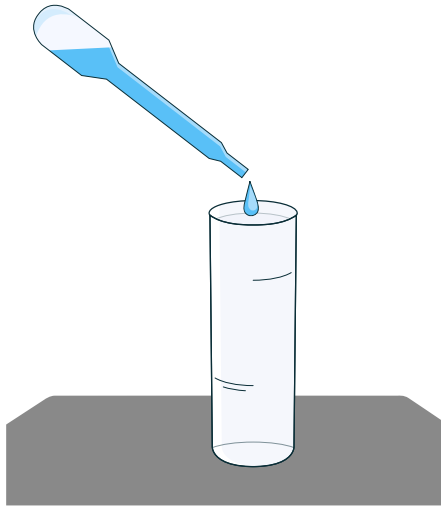


Step #1

Using the Pipette, Add Seven (7) drops of drinking water into the Test Vial.

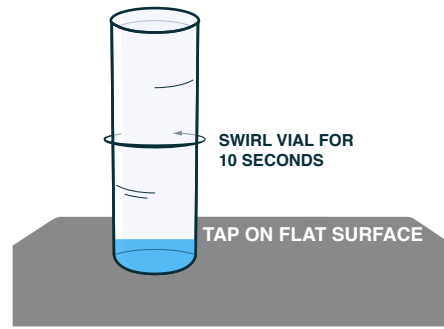


Step #2

Swirl Test Vial for 10 seconds. Make sure all liquid is at the bottom of the Test Vial by tapping it gently on a flat surface.

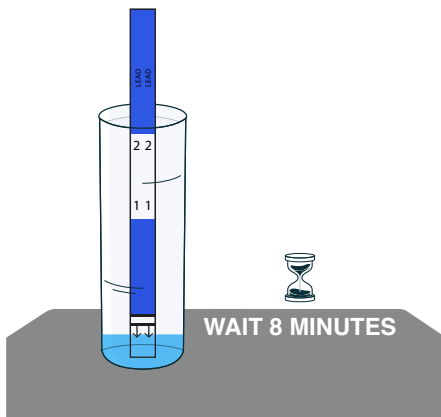

Step #3

Place Test Strip into the Test Vial with arrows pointing DOWN. Wait 8 MINUTES. Do not disturb the Test Strip or Test Vial during this time.

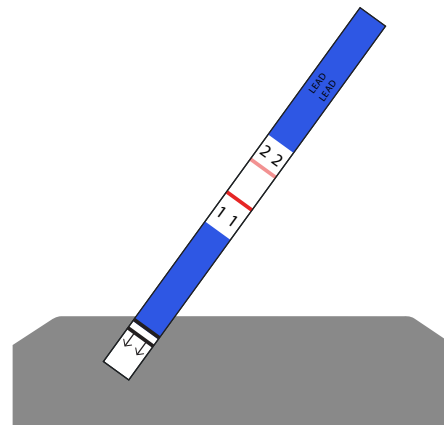

Step #4

Take Test Strip out of Test Vial and interpret the results.





INTERPRETING THE RESULTS

Negative Result:

Line 1 is darker than Line 2 (or only Line 1 is visible)



Negative

Positive Result:

Lines are equally dark, or Line 2 is darker than Line 1, or only Line 2 is visible



Positive

Invalid Result:

No lines appear



Invalid

IF THE TEST IS POSITIVE, YOUR WATER SAMPLE MAY CONTAIN LEAD AT A TOXIC LEVEL.

Please note that Watersafe® is a screening test and cannot be used to certify water as safe or unsafe. Watersafe® provides approximate results ONLY when used in strict accordance with instructions. Silver Lake Research Corporation expressly disclaims any liability resulting from use of this product, failure to follow instructions, or reliance on test results.





Check out our other great rapid test kits!

watersafe[®]
BACTERIA TEST

watersafe[®]
DRINKING WATER TEST

Radon
— screen

Visit store.silverlakeresearch.com today!



SILVER LAKE
RESEARCH

For more information, please contact Silver Lake Research Corporation.
Email Us: info@silverlakeresearch.com
www.SilverLakeResearch.com

Copyright © Silver Lake Research Corporation. All Rights Reserved.

PN: U-055 Revision 3.0 August 2024

